

Information for Lot 9 of ErP (Ecodesign)

This addendum addresses European Union (EU) Ecodesign requirements for servers and storage products. All data and ratings within this addendum are in reference only to the Supermicro product(s) in the manual. The below information conforms with requirements laid down in Annex II of the Commission Regulation 2019/424.

- 3(1)(a): See Section 1.1 of the system manual for the product type.
- 3(1)(b): See the title page and preface of the system manual for the trademark and manufacturer's address.
- 3(1)(c): See the title page of the system manual for product model number(s).
- 3(1)(d): See the serial number on the physical system to determine the year of manufacture.
- 3(1)(e-j): **PSU Efficiency and Power Factor Value (Table) (From 80 Plus report)**

PSU Model #: PWS-2K08A-1R Watts: 1000W	PSU Efficiency				Power Factor
% of Rated Load	10 %	20 %	50 %	100 %	50 %
Single Output (AC-DC)	92.80%	94.89%	96.09%	94.53%	0.99

System (EUT) Efficiency in Idle State Power (Table)

Representative Configurations	Measured Idle State Power (W)	Calculated Idle Power Allowance (W)
High-End Performance Configuration	321	392.57
Typical Configuration	N/A	N/A
Low-End Performance Configuration	150	292.28

System (EUT) Efficiency in Active State Power (Table)

Representative Configurations	Active State Efficiency Score (Effserver)	Minimum Active State Efficiency for 2-Socket Server
High-End Performance Configuration	38	9.5
Typical Configuration	N/A	N/A
Low-End Performance Configuration	32.3	9.5

3(1)(k): The operating condition class is **A2**.

Operating condition class	Dry bulb temp °C		Humidity range, non-condensing		Max dew point (°C)	Maximum rate of change (°C/hr)
	Allowable range	Recommended range	Allowable range	Recommended range		
A1	15- 32	18-27	- 12 °C Dew Point (DP) and 8 % relative humidity (RH) to 17 °C DP and 80 % RH	- 9 °C DP to 15 °C DP and 60 % RH	17	5/20
A2	10-35	18-27	- 12 °C DP and 8 % RH to 21 °C DP and 80 % RH	Same as A1	21	5/20
A3	5-40	18-27	- 12 °C DP and 8 % RH to 24 °C DP and 85 % RH	Same as A1	24	5/20
A4	5-45	18-27	- 12 °C DP and 8 % RH to 24 °C DP and 90 % RH	Same as A1	24	5/20

3(1)(l): The idle state power at the higher boundary temperature of the operating conditions class is 321W.

3(1)(m): The active state efficiency and performance is 38.

3(1)(n): There are two methods by which a user can securely delete data from this system. The user performing secure data deletion should be an IT professional.

The first is with a Unified Extensible Firmware Interface (UEFI) shell utility. This utility works on X10/X11/H11/H12/M11 motherboard series with onboard SATA/NVMe devices. Any user may access and download this utility through following link:

https://www.supermicro.com/about/policies/disclaimer.cfm?url=/wftp/utility/Lot9_Secure_Data_Deletion_Utility/

Download the shell utility package and extract it to a USB flash drive, then plug the drive into the server for which secure data deletion is necessary. Then turn the system on. Navigate to the BIOS setup menu, then place the server system into the UEFI shell environment. Follow the instructions in the README file to invoke the utility and complete the deletion.

The second method is through the secure data deletion tool provided by the original manufacturer of the hard drive. This should be used in a scenario where the shell utility is not applicable. Each manufacturer should have the tool available on their website. If needed, please look on the hard drive label for the name of the manufacturer and model information.

3(1)(o): List of recommended combinations of blade servers with chassis: N/A.

3(1)(p): List of all current SKUs within this product family: N/A.

3(3)(a): There is no use of cobalt in batteries in this product.

The indicative weight range of neodymium in the HDD is 0.0 if manufactured by Western Digital, and is between 5-25 grams if manufactured by Seagate.

3(3)(b):

Please see the disassembly instructions on the next page.

Illustrated System Disassembly Instructions

Please note: All the illustrations in the below disassembly instructions are for demonstration only. Components shown here may not match exactly with the components in your system.


CAUTION: Always power off the system and unplug the power cord(s) first before disassembling the system!

1. Data Storage Devices

Type and number of fastenings: One (1) latch and four (4) Phillips screws.

Tools required: Screwdriver with PH2 bit.

Procedure: Push the release button on the carrier. Swing the handle fully. Grasp the handle and pull the drive carrier out of its bay.

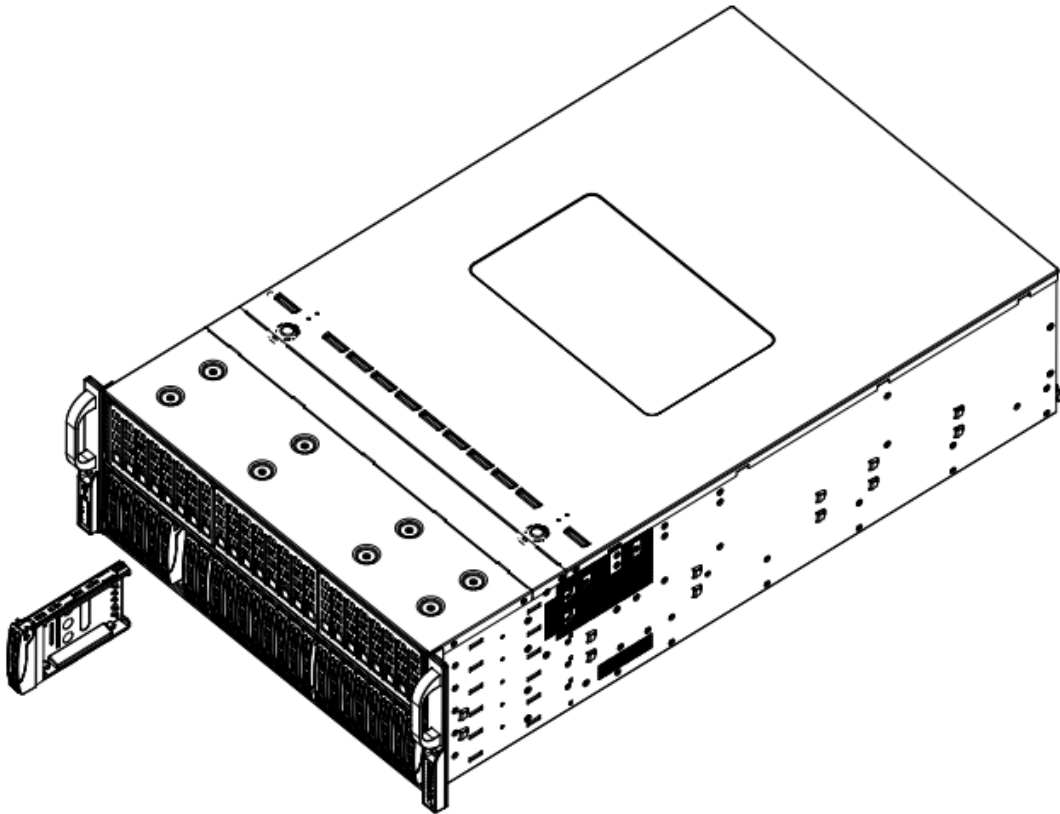


2. Chassis Cover

Type and number of fastenings: Two (2) buttons and one (1) thumb screw.

Tools required: None.

Procedure: Loosen the thumb screw at the rear of the top cover by hand. Push down on the two buttons simultaneously and hold. Keep applying pressure on the buttons and push away the top cover.

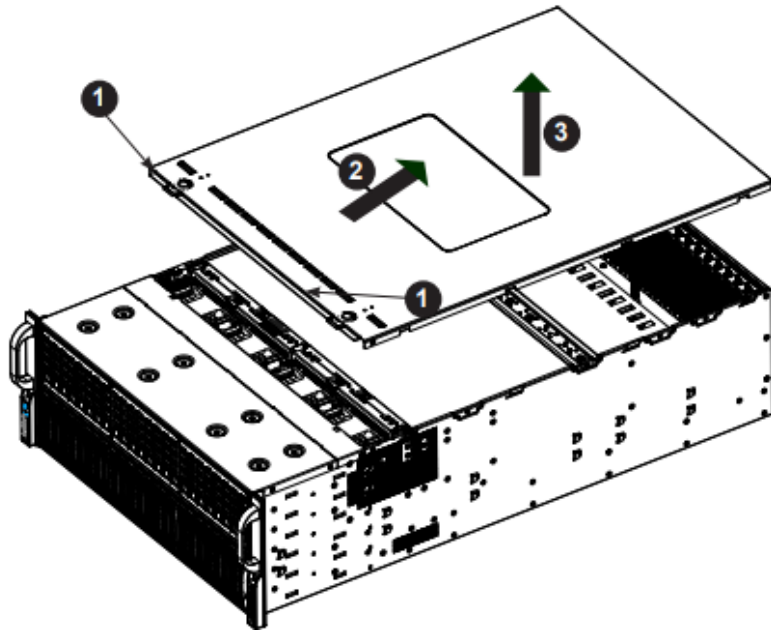


3. Memory

Type and number of fastenings: Two (2) latches per memory module.

Tools required: None.

Procedure: Press both release tabs on the ends of the memory module to unlock it. Once the module is loosened, remove it from the memory slot.

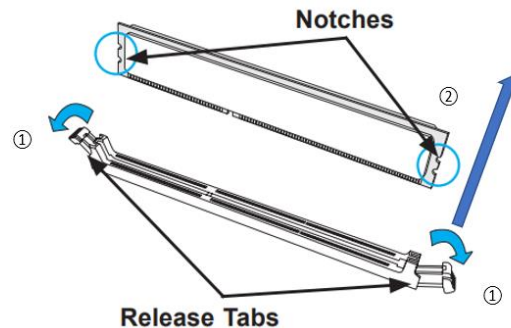

4. Processor

Type and number of fastenings: Seven (7) T20 Torx screws in total, four (4) on the heatsink and three (3) on the CPU.

Tools required: Screwdriver with T20 Torx bit.


Procedure:

- a. Remove the heatsink with four Torx screws.
- b. Clean the thermal grease left by the heatsink on the CPU package lid to limit the risk of its contaminating the CPU package landing pads or contacts.
- c. Reverse the procedure for installing the force frame onto the socket by unscrewing the plate in the 3-2-1 screw order and lifting the force frame to the vertical position.
- d. Lift the rail frame using the lift tabs near the front end of the rail frame. (Use caution, as the rail frame is spring loaded.)
- e. Grip the handle of the carrier frame and pull it upwards to extract it from the rail frame. Return the carrier frame/CPU package to its original shipping container.
- f. Grip the handle on the external cap and return it to the rail frame, sliding it downward until it rests in the frame. Gripping the rail frame, rotate it downward until it rests above and locks over the socket housing in its horizontal position. Push and rotate down the force frame until it is over the external cap and rail frame in a horizontal position. While holding down the force frame, secure it back to the socket frame by securing screw 1 in


place. (Note that without a CPU package in place, it is not necessary to tighten down screws 2 and 3 at this time.)

- g. Re-install the heatsink by screwing in the four screws in diagonal order.


Step a-c. (Unscrewing the force frame in the sequence 3-2-1)

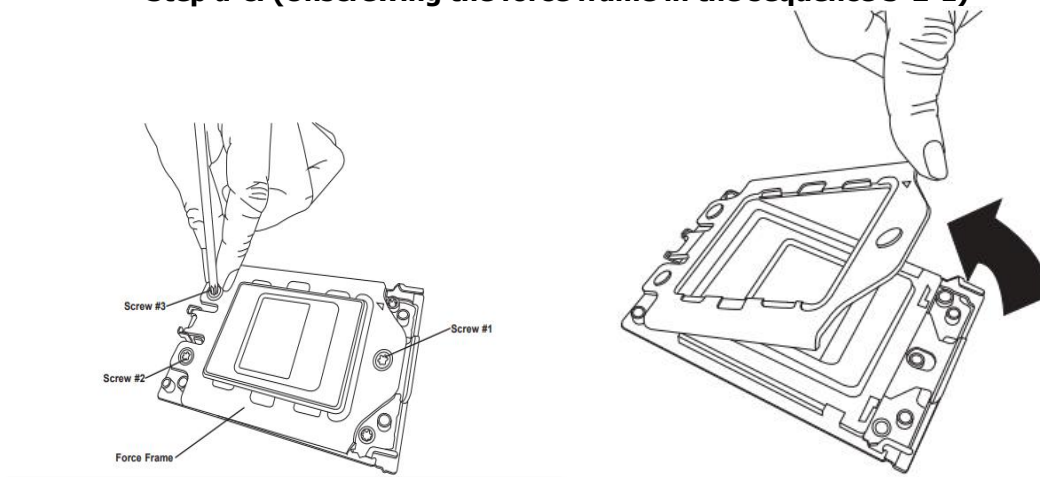


Step d-e. (Lifting the rail frame and removing the external cap)

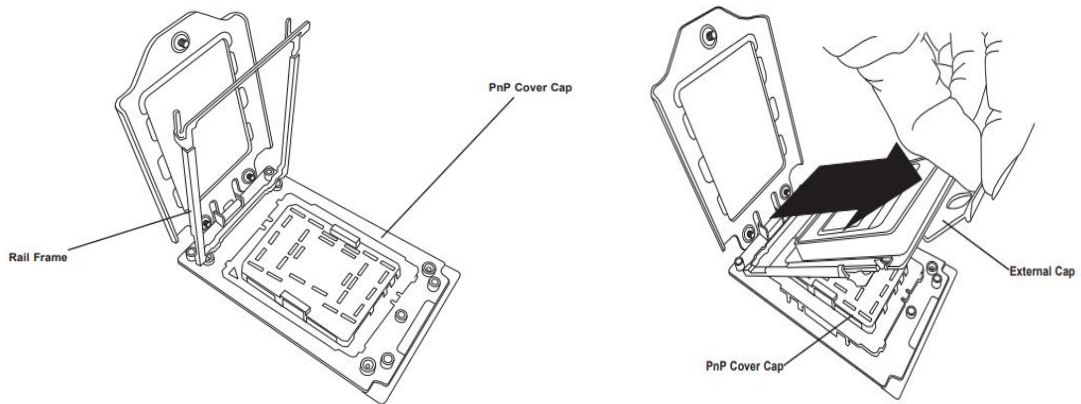


Step f. (Sliding the CPU into the rail frame)

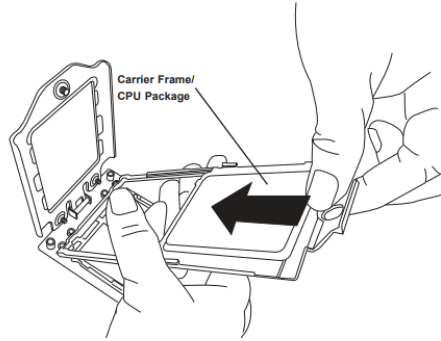


Step f (cont'd). (Removing the PnP cover cap from the CPU socket)


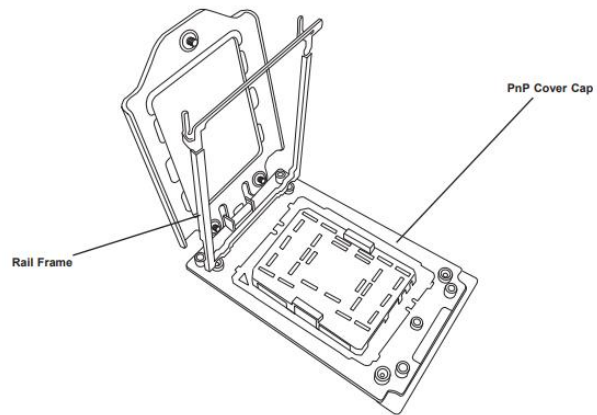


Step f. (cont'd) (Lowering the rail frame and latching on the socket)

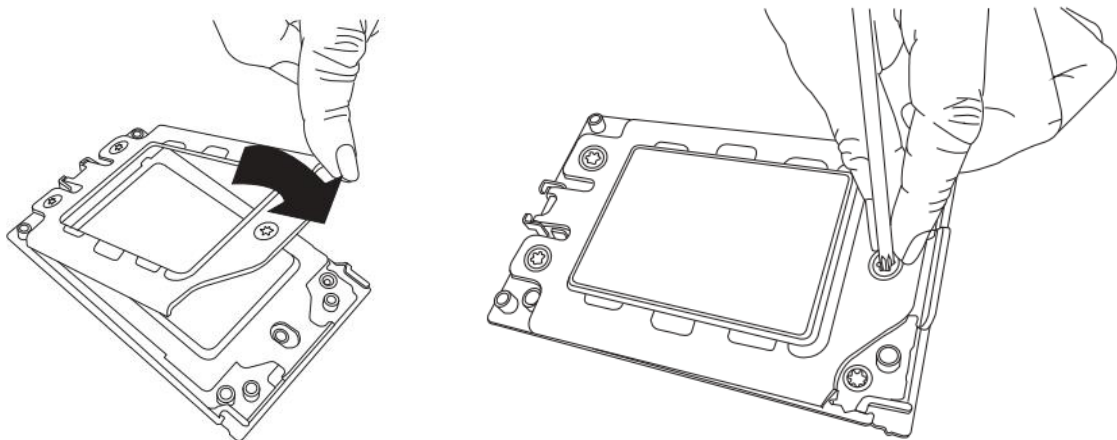

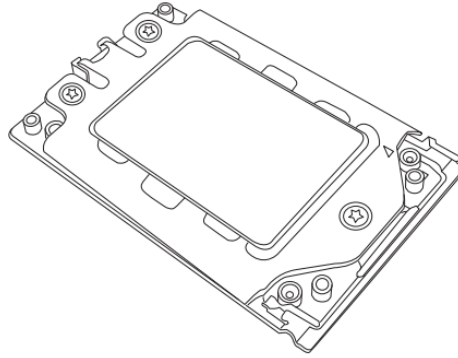

Step g. (Installing the heatsink)

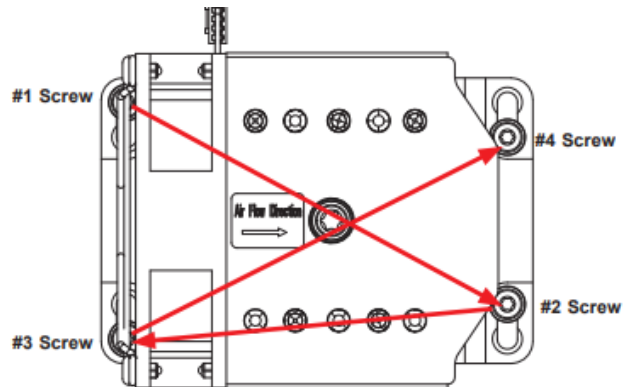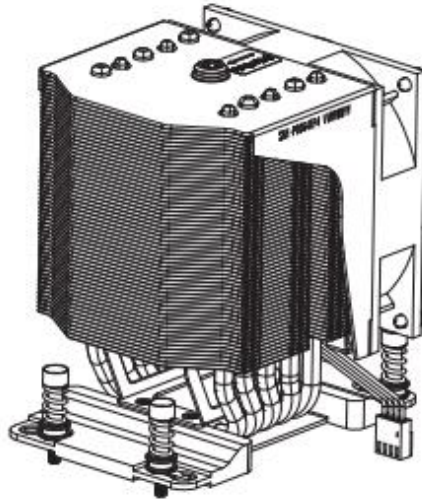


5. PCI Expansion Card/Graphics Card


Type and number of fastenings: Four (4) Phillips screws.

Tools required: Screwdriver with PH2 bit.

Procedure: The system includes a daughterboard for GPU/PCIe expansion capabilities.

- a. Power down the system and open the chassis cover.
- b. Remove the screws holding the chassis slot shield in place.
- c. Insert the expansion card into the serverboard slot, while aligning the expansion card shield with the slot in the rear of the chassis.
- d. Secure the expansion card shield to the chassis using the screws previously removed.

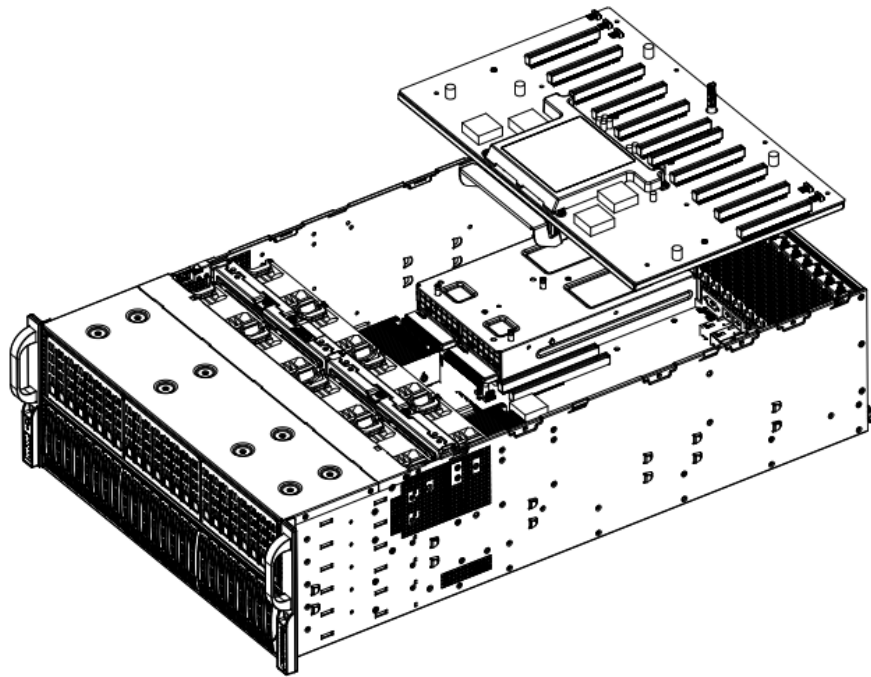

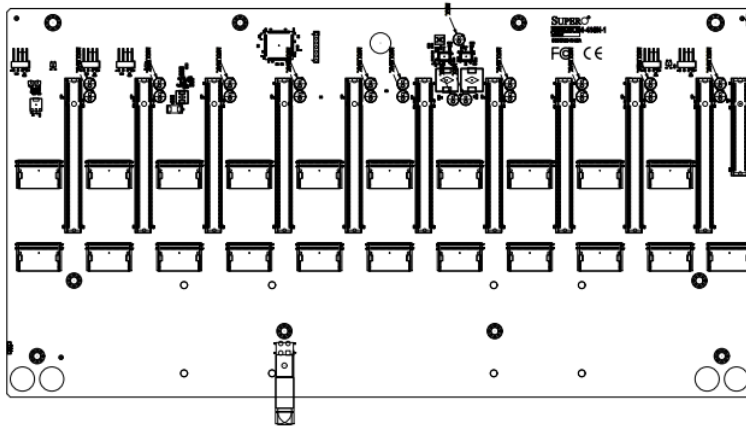


6. Power Supply Module

Type and number of fastenings: One (1) latch per module.

Tools required: None.

Procedure: Unplug the power cord from the power supply. Push the release tab on the back of the power supply module to the side and pull the module straight out.

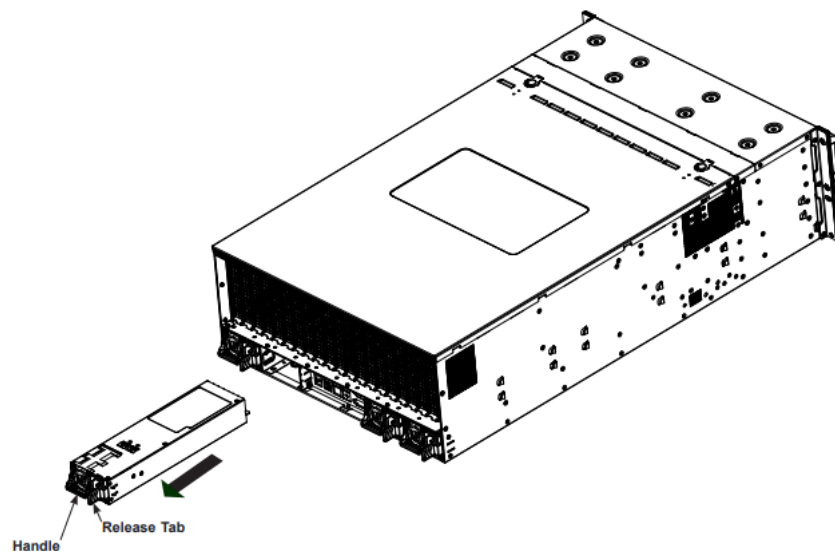


7. Motherboard

Type and number of fastenings: 10 Phillips screws.

Tools required: Screwdriver with PH2 bit.

Procedure: Remove all Phillips screws. Lift the motherboard from its base.

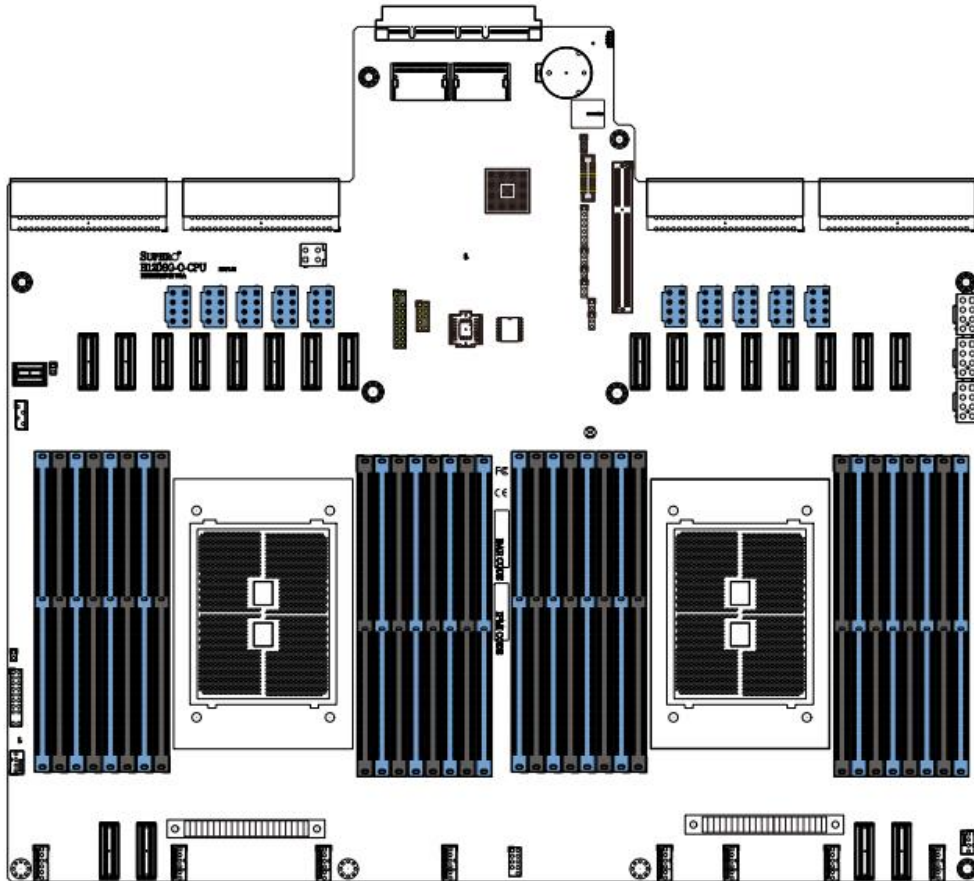


8. Batteries

Type and number of fastenings: One (1) latch.

Tools required: None.

Procedure: Push aside the small clamp that covers the edge of the battery. When the battery is released, lift it out of the holder.

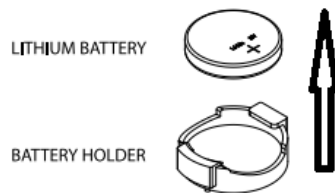

9. Fans

Type and number of fastenings: One (1) fan header per fan.

Tools required: None.

Procedure:

- a. Open the chassis and press the fan housing lever to unlock the fan from the bracket.
- b. While applying pressure to fan housing lever, gently push the fan upward from underneath the fan housing to remove it.
- c. Place the new fan into the vacant space in the housing. Apply pressure to the top of the new fan to lock it into the fan housing. The new fan should click into place.
- d. Confirm that the fan is working properly before replacing the chassis cover.

